


## TrueTilt™ Dual Axis Wide Range Electrolytic Tilt Sensor Part Number: 0717-4313-99

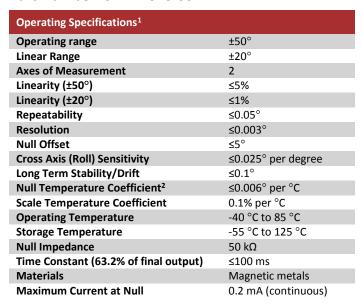


Physical Characteristics	
Height (including leads)	18.8 mm (0.740")
Diameter (cap)	8.26 mm (0.325")
Diameter (flange)	14.2 mm (0.360")
Lead Spacing (center to center)	2.54 mm (0.100")
Lead Diameter	0.48 mm (0.019")
Lead Length	5.08 mm (0.200")
Weight	1.5 g

### Benefits

- Very low power consumption
- Extremely long life
- Minimal drift over lifetime compared to MEMS devices
- Excellent resolution and repeatability
- Superior performance in extreme temperatures and environments
- Excellent customer support
- Manufactured in the United States of America

#### **Functional Diagram**

Side Views:





#### Description

The 0717-4313-99 TrueTilt™ dual axis, wide range electrolytic tilt sensor has a robust, all metal construction providing durability while maintaining superior tolerances and sensor to sensor performance. It is an economical tilt sensor ideal for a versatile range of applications in many markets.


This is a passive sensor that requires signal conditioning electronics to provide an output. For a list of compatible signal conditioners, see the Related Products section on page 2.


#### **Applications**

- Recreational vehicle leveling (also known as an RV, caravan, camper van, or motorhome)
- Construction machinery and equipment
- Railway monitoring
- Mobile satellite positioning
- Agricultural machinery and equipment

View a full list of applications for our sensors on our website at www.frederickscompany.com.

#### **Linear and Operating Range Behavior**

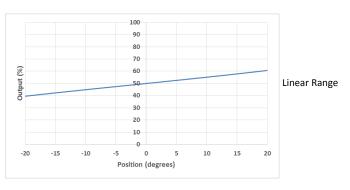

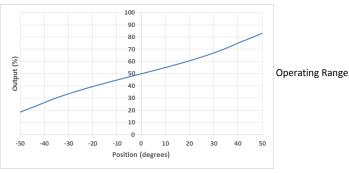

#### **Certifications and Ratings**

**RoHS Compliant** 

#### Notes

<sup>1</sup> See application note AN1002 for operating specification definitions.

www.frederickscompany.com

sales@frederickscompany.com

+1 215 947 2500

<sup>&</sup>lt;sup>2</sup> See application note AN1001 for a description of temperature compensation.



# TrueTilt™ Dual Axis Wide Range Electrolytic Tilt Sensor Part Number: 0717-4313-99


When using an excitation circuit not designed by The Fredericks Company, ensure that no direct current passes through the sensor. Direct current will lead to sensor damage, output drift, and general instability. For a description of hardware and software design for this sensor, see application note AN1000.

The 0717-4313-99 and all sensors in the TrueTilt™ series must be mounted horizontally (parallel to the surface of the earth and perpendicular to the force of gravity). For best performance, isolate the sensor from vibrations when mounting it.

Further information on electrolytic tilt sensor basics is provided on our website at www.frederickscompany.com.

#### **Test Circuit**

All data was acquired with a Fredericks Company Dual Axis 6200 Series Signal Conditioner in single axis mode at 20° C. A general schematic of our signal conditioners is provided below. Further information on sensor excitation and excitation circuitry is provided on The Fredericks Company website and in the application note AN1000.

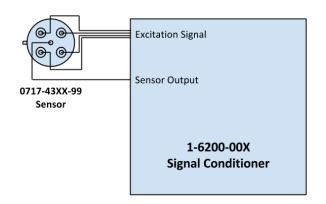

# Related Products Signal Conditioners (PCB, no sensor) 1-6200-005 SPI interface 1-6200-006 RS-232 interface 1-6200-007 Analog/PWM interface 1-6200-008 RS-485 interface


PCB Inclinometers (sensor mounted on PCB, no enclosure)		
0729-1751-99	SPI interface	
0729-1752-99	RS-232 interface	
0729-1753-99	Analog/PWM interface	
0729-1754-99	RS-485 interface	

Environmentally Sealed Inclinometers (IP66 or higher rating)		
0729-1755-99	Analog interface	
0729-1759-99	RS-232 interface	
0729-1760-99	RS-485 interface	
0729-1761-99	CAN Bus SAE J1939 interface	

Visit our website at www.frederickscompany.com for a full list of products.

**Dimensional Drawings** 



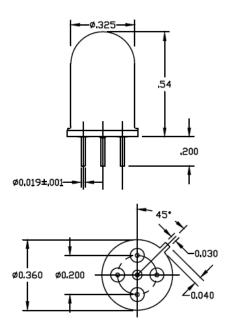

#### **Contact Us**

© 2016 The Fredericks Company

The Fredericks Company 2400 Philmont Avenue Huntingdon Valley, PA 19006

tel: +1 215 947 2500 fax: +1 215 947 7464 email: sales@frederickscompany.com

responsibility for inaccuracies in product specifications or any liability arising from product use.

web: www.frederickscompany.com

Disclaimer: Specifications subject to change without notice. The Fredericks Company assumes no

sales@frederickscompany.com +1 215 947 2500 www.frederickscompany.com 0717-4313-99\_ds rev B Page 2/2