




# More Precision

**optoNCDT** // Laser displacement sensors (triangulation)




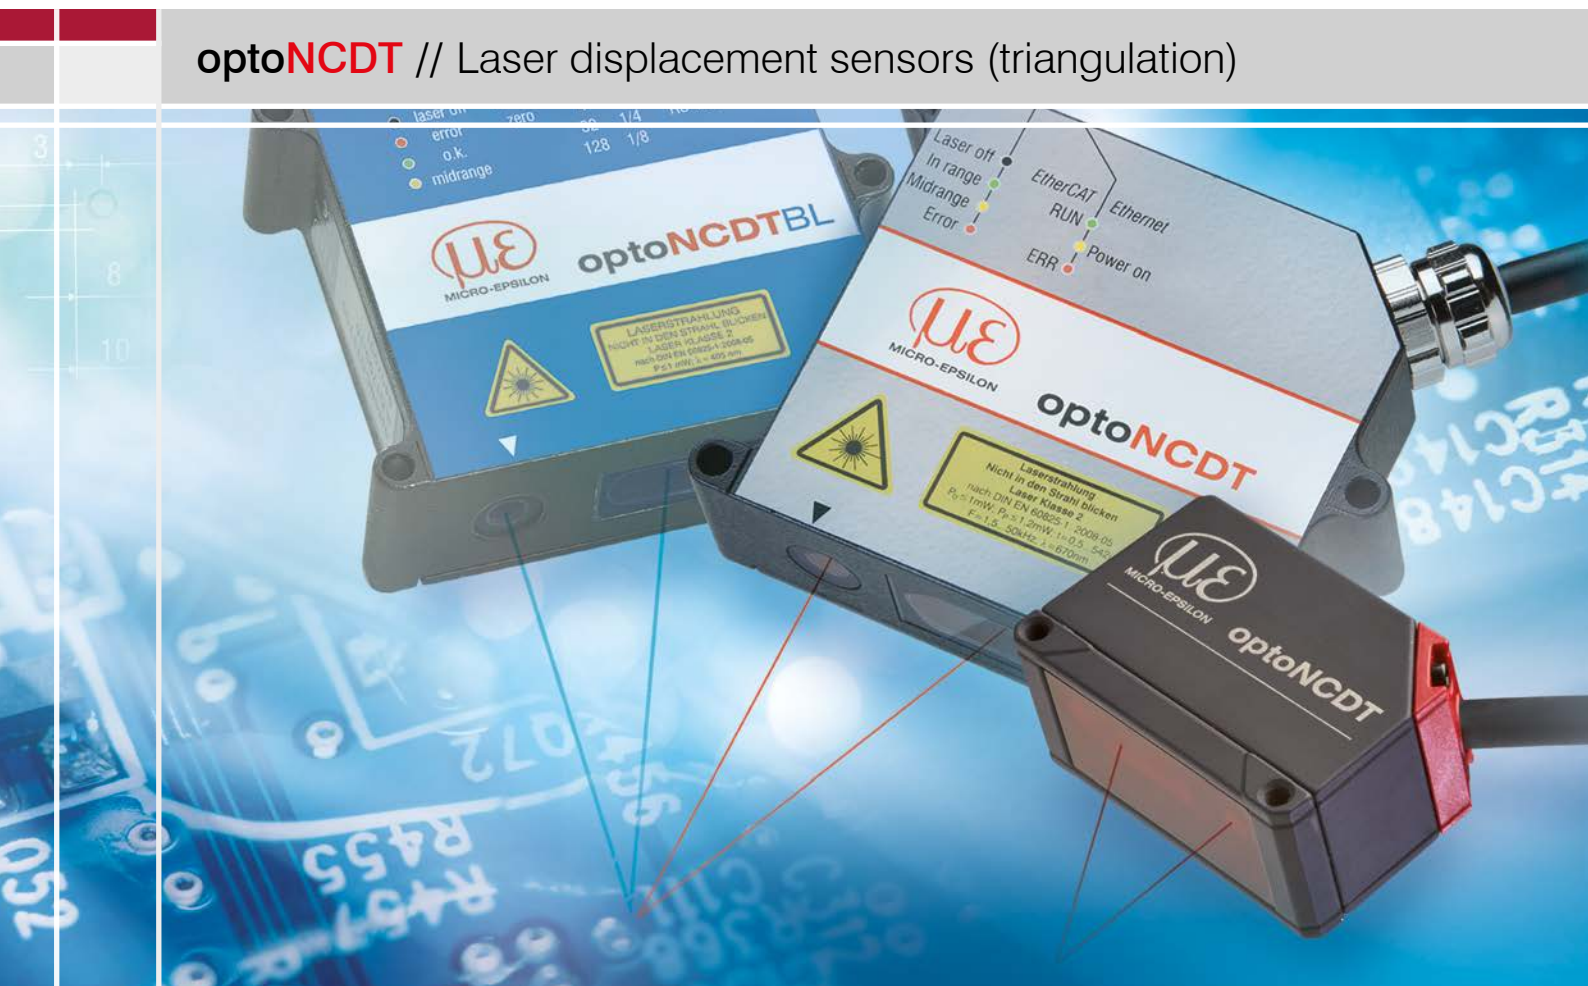

|            |  |
|------------|--|
|            | Three models with measuring ranges from 2mm to 50mm    |
|            | Blue Laser Technology (Blue violet laser diode 405nm)  |
|            | Adjustable measuring rate up to 49.14kHz               |
| INTER FACE | Ethernet / Ethercat / RS422<br>Analog output via C-Box |
|            | Advanced Real-Time-Surface-Compensation                |
|            | Calibration certificate included                       |
|            | Measurement of diffuse and specular surfaces           |
|            | Configuration via web interface                        |


Blue Laser sensors in the optoNCDT 2300BL series are designed for high speed displacement, distance and position measurements on red-hot glowing metals and organic materials. In numerous applications, Blue Laser sensors are superior to standard sensors that use a red laser diode. In contrast to a red laser, the blue-violet laser light does not penetrate materials such as wood, skin and foods. The blue laser generates a minimal laser point on the surface and therefore offers more stable, precise measurements.

optoNCDT 2300-2BL / 2300-5BL  
Diffuse reflection

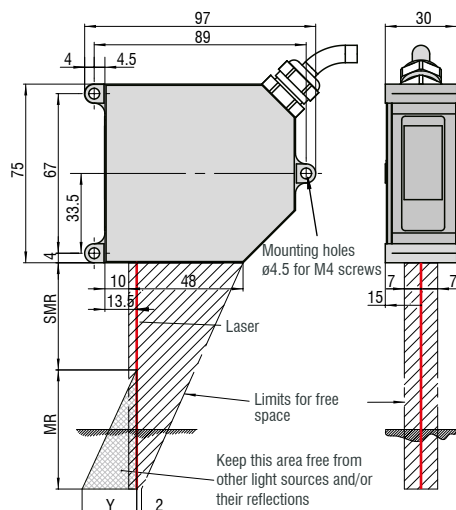



| MR | SMR | Y   |
|----|-----|-----|
| 2  | 24  | 1.5 |
| 5  | 24  | 3.5 |

optoNCDT 2300-2BL / 2300-5BL  
Direct reflection

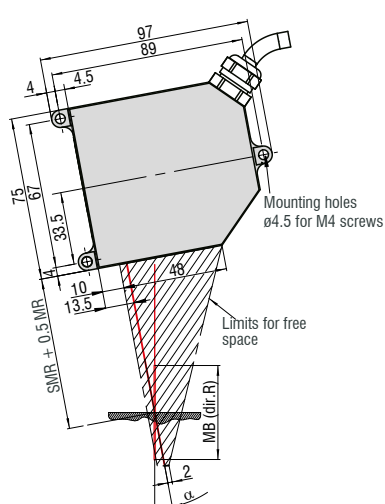

| MR | SMR + 0.5 MR | $\alpha$ |
|----|--------------|----------|
| 2  | 25           | 20.5°    |
| 5  | 26.5         | 20°      |

optoNCDT 2310-50BL

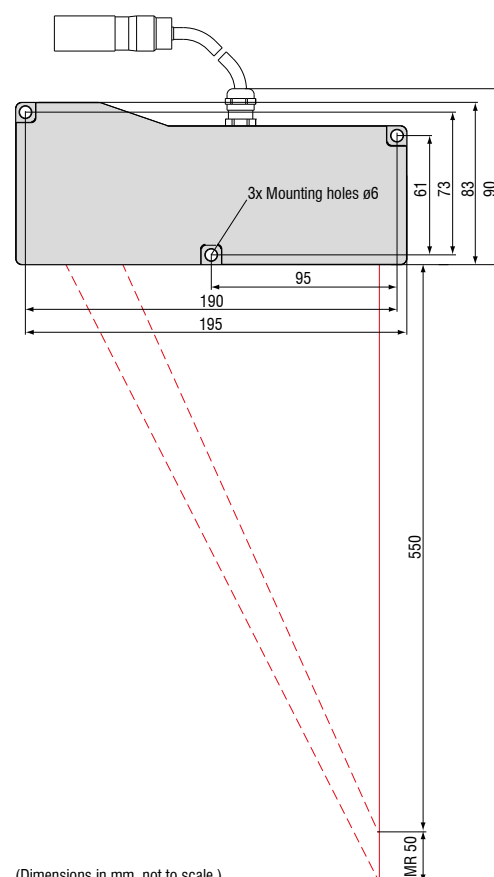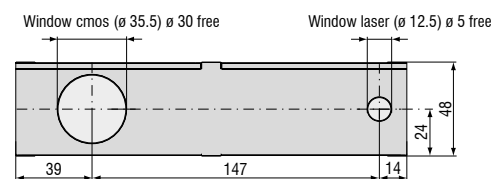

(Dimensions in mm, not to scale.)

| Model                               |          | ILD2300-2 BL  | ILD2300-5 BL | ILD2310-50 BL |
|-------------------------------------|----------|---|--------------|---------------|
| Measuring range <sup>1)</sup>       |          | 2 (2)mm   | 5 (2)mm      | 50 (25)mm     |
| Start of measuring range            | SMR      | 24 (24)mm   | 24 (24)mm    | 550 (575)mm   |
| Midrange                            | MMR      | 25 (25)mm   | 26.5 (25)mm  | 575 (587.5)mm |
| End of measuring range              | EMR      | 26 (26)mm   | 29 (26)mm    | 600 (600)mm   |
| Linearity                           |          | 0.6µm   | 1.5µm        | 40µm          |
|                                     |          | ≤ ±0.03% FSO  |              | ≤ ±0.08% FSO  |
| Resolution (20kHz)                  |          | 0.03µm  | 0.08µm       | 7.5µm         |
|                                     |          | 0.0015% FSO   |              | 0.015% FSO    |
| Measuring rate                      |          | switchable (software) 49.14 / 30 / 20 / 10 / 5 / 2.5 / 1.5kHz (49.14kHz with reduced measuring range) |              |               |
| Light source                        |          | Semiconductor laser < 1 mW, 405nm (blue violet), laser class 2  |              |               |
| Permissible ambient light           |          | 10,000 lx   |              |               |
| Spot diameter                       | SMR      | 70 x 80µm   | 200 x 200µm  | 400 ... 500µm |
|                                     | MMR      | 20 x 20µm   | 20 x 20µm    | 400 ... 500µm |
|                                     | EMR      | 80 x 100µm  | 200 x 400µm  | 400 ... 500µm |
| Protection class                    |          | IP65  |              |               |
| Operating temperature               |          | 0°C ... +50°C   |              |               |
| Storage temperature                 |          | -20°C ... +70°C   |              |               |
| Inputs/Outputs                      |          | Ethernet / EtherCAT<br>RS422<br>analog output via CSP2008 / C-Box                                     |              |               |
| Inputs                              |          | Laser on/off<br>Sync/Trigger input  |              |               |
| Power supply                        |          | 24 VDC (11 ... 30V); PV < 3W  |              |               |
| LED                                 |          | status / power / Ethernet / EtherCAT  |              |               |
| Sensor cable                        | Standard | 0.25m (with connector)  |              |               |
|                                     | Option   | 3 / 6 / 9m with 15-pole sub-D Connector   |              |               |
| Synchronization                     |          | possible for simultaneous or alternating measurements   |              |               |
| Electromagnetic compatibility (EMC) |          | EN 61326-1: 2006-10<br>DIN EN 55011: 2007-11 (group 1. class B)<br>EN 61 000-6-2: 2006-03             |              |               |
| Vibration                           |          | 2g / 20 ... 500Hz   |              |               |
| Shock                               |          | 15g / 6ms / 3 axes  |              |               |
| Weight (with 25cm cable)            |          | 550g  | 550g         | approx. 800g  |

FSO = Full Scale Output; The specified data apply to a white, diffuse reflecting surface (reference: ceramics)

SMR = Start of measuring range; MMR = Midrange; EMR = End of measuring range

<sup>1)</sup> Range specifications: value in brackets is valid for a measuring rate of 49.14kHz

**Accessories for all optoNCDT Series****Power supply**

- PS 2020 (power supply 24 V / 2.5 A, input 100 - 240 VAC, output 24 VDC / 2.5 A, mounting onto symmetrical standard rail 35mm x 7.5mm, DIN 50022)

**Controller unit for evaluation and signal conversion**

- CSP 2008 (controller for multiple signal processing; analog and digital interfaces)

**Controller unit for evaluation and signal conversion**

- C-Box/2A (controller for conversion and evaluation of up to two sensor signals)

**Interface card**

- IF2008 (interface card for multiple signal processing; analog and digital interfaces)

**USB converter**

- IF2001/USB RS422/USB Converter  
(converter for digital signals in USB)

**USB converter**

- IF2004/USB 4 channels RS422/USB Converter  
(converter, up to 4 digital signals in USB)

**Accessories optoNCDT 1320/1420/1402CL1****Supply and output cable, drag-chain suitable**

- PCF1420-1/I (1m, output 4...20mA)
- PCF1420-1/I(01) (1m, output 4...20mA)
- PCF1420-3/I (3m, output 4...20mA)
- PCF1420-6/I (6m, output 4...20mA)
- PCF1420-10/I (10m, output 4...20 mA)
- PCF1420-15/I (15m, output 4...20mA)
- PCF1420-3/U (3m, with integrated resistor, output 1...5 VDC)\*
- PCF1420-6/U (6m, with integrated resistor, output 1...5 VDC)\*
- PCF1420-10/U (10m, with integrated resistor, output 1...5 VDC)\*
- PCF1420-15/U (15m, with integrated resistor, output 1...5 VDC)\*
- PCF1420-3/IF2008 (3m, interface and supply cable)
- PC1420-6/IF2008 (6m, supply and output cable)
- PCF1420-10/IF2008 (10m, interface and supply cable)
- PC 1402-3/CSP (3m, connection cable for CSP 2008, only for optoNCDT 1420)

\* on request with output 2...10 VDC

**Supply and output cable, suitable for use with robots**

(available in 90° version)

- PCR 1402-3/I (3m)
- PCR 1402-6/I (6m)
- PCR 1402-8/I (8m)

**Accessories optoNCDT 1610/1630****Supply and output cable**

- PC 1605-3 (3m)
- PC 1605-6 (6m)
- PC 1607-5/BNC (5m, BNC connector)

**Accessories optoNCDT 1700/1700LL/1700BL****Supply and output cable (drag-chain suitable)**

- PC 1700-3 (3m)
- PC 1700-10 (10m)
- PC 1700-10/IF2008 (10m, for use with interface card IF2008)
- PC 1700-3/T (3m, for use with trigger box)
- PC 1700-10/T (10m, for use with trigger box)
- PC 1700-3/USB (3m, with USB-RS422-converter, power supply 90 ... 230 VAC)

**Supply and output cable (suitable for use with robots)**

- PCR 1700-5 (5m)
- PCR 1700-10 (10m)

**Supply and output cables for temperatures up to 200°C**

- PC1700-3/OE/HT (3m)
- PC1700-6/OE/HT (6m)
- PC1700-15/OE/HT (15m)

**Protection housing**

- SGHF (with air-purge collar), sizes S and M
- SGH (without air-purge collar), sizes S and M
- SGHF-HT (with water cooling)

**Accessories optoNCDT 2300/2300LL/2300BL****Supply and output cable**

- PC2300-0,5Y (connection cable to PC or SPS; for operation a PC2300-3/SUB-D will be required)
- PC2300-3/SUB-D (3m; for operation a PC2300-0,5Y will be required)
- PC 2300-3/CSP (3m, connection cable IL2300-UniController)
- PC 2300-3/IF2008 (interface and supply cable)
- PC 2300-3/OE (3m)
- PC 2300-6/OE (6m)
- PC 2300-9/OE (9m)
- PC 2300-3/CSP (3m, connection cable IL2300-UniController)
- PC 2300-10/CSP (10m, connection cable IL2300-UniController)
- PC 2300-15/CSP (15m, connection cable IL2300-UniController)
- PC 2300-15/OE (15m)


\* other cable lengths on request

**Protection housing**

- SGHF (with air-purge collar), sizes S and M
- SGH (without air-purge collar), sizes S and M
- SGHF-HT (with water cooling)

**Supply and output cables for temperatures up to 200°C**

- PC2300-3/OE/HT (3m)
- PC2300-6/OE/HT (6m)
- PC2300-9/OE/HT (9m)
- PC2300-15/OE/HT (15m)

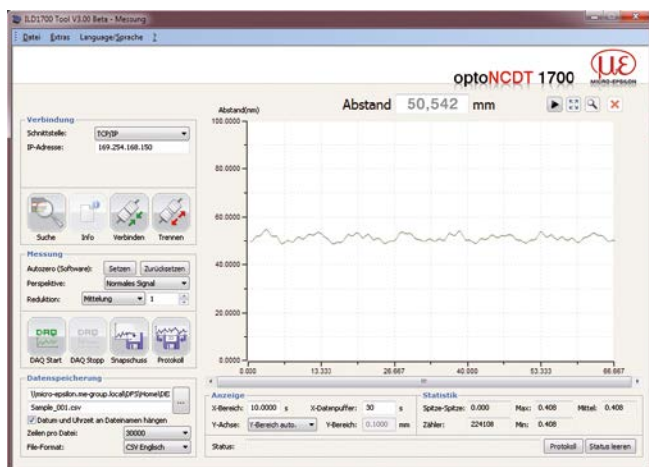

### Setup and configuration software

The scope of supply includes a software for easy sensor configuration. The settings can be implemented conveniently via a Windows user interface on the PC. The sensor parameters are sent to the sensor via the serial port and can also be saved if required. The software is available as single and multi-channel version. The sensor is connected to the PC via the sensor cable using a USB converter.

[for any ILD sensor]

### Free download

Download free of charge from [www.micro-epsilon.com/download](http://www.micro-epsilon.com/download): software, driver and well-documented driver DLL for easy sensor integration in existing or customer software.

### Protection housing for harsh environment

To protect the laser sensors in extreme environments, individual protective housings are available for all sensor models. There are three different models:

#### SGH model:

Completely enclosed housing with an integrated front window, where the sensor measures through the window. The water-resistant housing provides protection against solvents and detergents.

#### SGHF model:

With window and compressed-air connection ideal for high ambient temperatures. The integrated air cooling of the housing offers optimum protection for the sensor.

#### SGHF-HT model:

This water-cooled protection housing with window and compressed-air connection is designed for measurement tasks in ambient temperatures up to 200°C.

Suitable for all long-range sensors

optoNCDT 1710

optoNCDT 1700-500 and optoNCDT 1700-750

optoNCDT 2310

optoNCDT 2300-200

Maximum ambient temperature 200°C

Maximum cooling water temperature  $T(\max) = 10^\circ\text{C}$

Minimum water flow rate  $Q(\min) = 3$  liters/min



**SGx ILD size S (140x140x71mm)**

for optoNCDT 1700 / 2300 dimensions 97x75mm

**SGx ILD size M (140x180x71mm)**

for optoNCDT 1700 / 2300 dimensions 150x80mm






### IF2008 - PCI interface card

The IF2008 interface card is designed for installation in PCs and enables the synchronous capture of four digital sensor signals and two encoders. The IF2008E expansion board enables the acquisition of two digital sensor signals, two analog sensor signals and eight I/O signals. The absolutely synchronous data acquisition plays an important role particularly for planarity or thickness measurement tasks. The data are stored in a FIFO memory in order to enable resource-saving processing in the PC in blocks.

#### Features

- 4x digital signals and 2x encoders with IF2008 basic PCB
- 2x digital signals, 2x analog signals and 8x I/O signals with IF2008E expansion board
- Additional expansion board for a total of 6x digital signals, 2x encoders, 2x analog signals and 8x I/O signals
- FIFO data memory
- Synchronous data acquisition

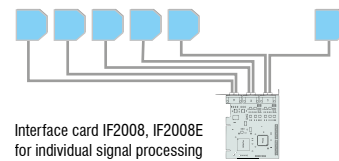

### IF2001/USB converter RS422 to USB

The RS422/USB converter transforms digital signals from a laser-optical sensor into a USB data packet. The sensor and the converter are connected via the RS422 interface of the converter. Data output is done via USB interface. The converter loops through further signals and features such as laser on/off, switch signals and function output. The connected sensors and the converter can be programmed through software.



### IF2004/USB: 4-channel converter from RS422 to USB

The RS422/USB converter is used for transforming digital signals from up to four optical sensors into USB data signals. The converter has four trigger inputs and a trigger output for connecting additional converters. Data is output via an USB interface. The connected sensors and the converter can be programmed through software.

#### Features

- 4x digital signals via RS422
- 4x trigger inputs, 1x trigger output
- Synchronous data acquisition
- Data output via USB



### C-Box controller for conversion and evaluation of up to two sensor signals

C-Box/2A is used for fast D/A conversion of two digital input signals or for evaluating two digital sensor signals. The controller is compatible with the optoNCDT 2300 laser triangulation sensors. Output of the sensor signals is possible via two configurable analog outputs, Ethernet or USB. Handling of the C-Box/2A and of the connected sensors are performed via web interface. Averaging functions, thickness, diameter, step and inclinations can be calculated. The D/A conversion is executed at 16 Bit and max. 70kHz.





### CSP2008 - Universal controller for up to six sensor signals

The controller CSP2008 has been designed to process two to six both optical and other sensors from Micro-Epsilon (6x digital or 4x analog input signals max., 2x internal + 4x external via Beckhoff EtherCAT modules). EtherCAT is intended as external bus for connecting further sensors and I/O modules. The controller is equipped with a display offering multi-color backlighting which changes its color in the case of exceeding the limit value while a signal is displayed.


### Features

- Real-time capability up to 100kHz (processing and output of measured values with 100kHz)
- Unique user interface (web browser) for the configuration of the controller via Ethernet on a PC. The user interface does not require any program installation. Display and storage of measured values on the PC via web browser.
- Simple sensor connection with automatic sensor recognition, configuration of the sensor using buttons and display on universal controller or via web browser
- Modular system upgradable with additional I/O modules for customer-specific requirements. Internal communication between I/O components via EtherCAT connection (CSP 2008 acts as master).
- Extremely flexible; function modules are freely combinable
- Simple mounting using mounting rail TS 35

### System design


#### Sensors via RS422

optoNCDT 1420  
optoNCDT 1700  
optoNCDT 2300  
optoCONTROL 2500  
optoCONTROL 2600  
confocalDT 2451/2471

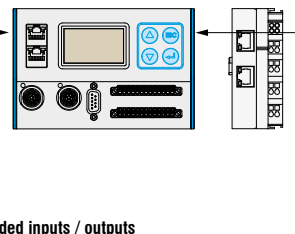

#### Beckhoff modules for extended inputs / outputs

EK1100, EtherCat bus coupler  
EL4102, analog output terminal, 0 ... +10V, 2 channels (16bit), EtherCAT  
EL4132, analog output terminal, -10... +10V, 2 channels (16bit), EtherCAT  
EL4024, analog output terminal, 4 ... 20mA, 4 channels (12bit), EtherCAT  
EL2002, digital output terminal, 24 VDC/ 0,5 A, 2 channels, EtherCAT  
EL2004, digital output terminal, 24 VDC/ 0,5 A, 4 channels, EtherCAT  
EL3142, analog input terminal, 0 ... 20mA, 2 channels (16bit), EtherCAT  
EL3162, analog input terminal, 0 ... 10V, 2 channels (16bit), EtherCAT  
EL1002, digital input terminal, 24 VDC/3 ms, 2 channels, EtherCAT  
EL1012, digital input terminal, 24 VDC/10  $\mu$ s, 2 channels, EtherCAT  
EL1014, digital input terminal, 24 VDC/10  $\mu$ s, 4 channels, EtherCAT  
EL1104, digital input terminal, 24 VDC/3 ms, 4 channels, EtherCAT  
EL5101, incremental encoder interface, RS485 differential inputs, EtherCAT  
EK1122, 2-Port EtherCAT junction  
RS422 extension terminal

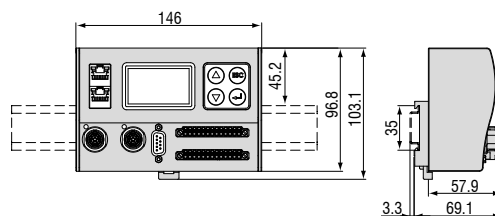

Universal controller with mounting rail TS 35  
(dimensions in mm, not to scale)

## High performance sensors made by Micro-Epsilon



Sensors and systems for displacement and position



Sensors and measurement devices for non-contact temperature measurement



2D/3D profile sensors (laser scanner)



Optical micrometers, fiber optic sensors and fiber optics



Color recognition sensors, LED analyzers and color online spectrometer



Measurement and inspection systems