



More Precision


wireSENSOR // Draw-wire displacement sensors





- Robust plastic housing
- Customized versions for OEM
- Potentiometer, current and voltage output

Model MK88

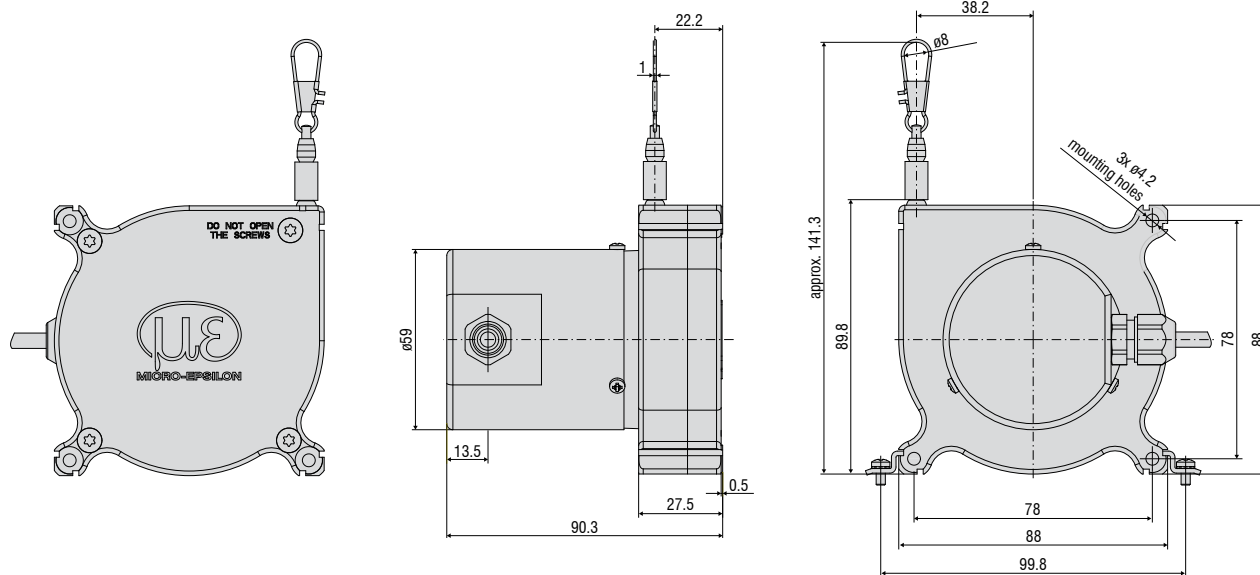

Model		WPS-2300-MK88	WPS-3500-MK88	WPS-5000-MK88
Output		P/U/I		
Sensor element		potentiometer		
Measuring range		2300mm	3500mm	5000mm
Linearity		<0.15% FSO	<0.3% FSO	<0.4% FSO
Resolution/Sensitivity		quasi infinite		
Temperature range		-20 to 80°C		
Material	housing	plastic, PA 6 GF 30		
	draw wire	coated polyamide stainless steel (ø 0.45mm)		
	protection cap	plastic, PBT GF 20		
Wire mounting		wire clip		
Sensor mounting		mounting holes / mounting grooves on the sensor housing		
Wire retraction force (min)		4N		
Wire extension force (max)		9N		
Wire acceleration (max)		appr. 7g		
Protection class		IP 65		
Electrical connection		cable, radial, 1m		
Weight (with cable)		400-430g		



FSO = Full Scale Output
 Specifications for analog outputs on page 51.

Article description

WPS -	2300 -	MK88 -	CR -	P
				Output option: P: potentiometer U: voltage I: current
				Connection CR: integrated cable, radial, 1m
				Model MK88
				Measuring range in mm

Accessories:

WE-xxx-M4	Wire extension with M4-wire connection, x=length
WE-xxx-Clip	Wire extension with eyelet, x=length
TR1-WDS	Pulley wheel, adjustable
TR3-WDS	Pulley wheel, fixed
GK1-WDS	Attachment head for M4
MH1-WDS	Magnetic holder for wire mounting
MH2-WDS	Magnetic holder for sensor mounting
MT-60-WDS	Mounting clamp for WDS-P60
FC8	Female connector for WDS, 8-pin
FC8/90	Female connector 90° for WDS
PC 3/8-WDS	Sensor cable, length 3m
PS 2020	(Power Supply 24 V / 2,5 A, Input 100 - 240 VAC, output 24 VDC / 2.5 A, for snap in mounting on DIN 50022 rail)
WDS-MP60	Mounting plate for P60 sensors

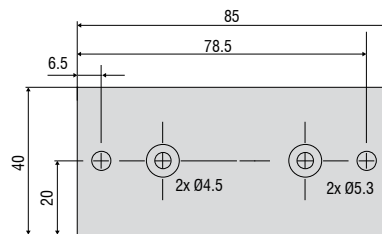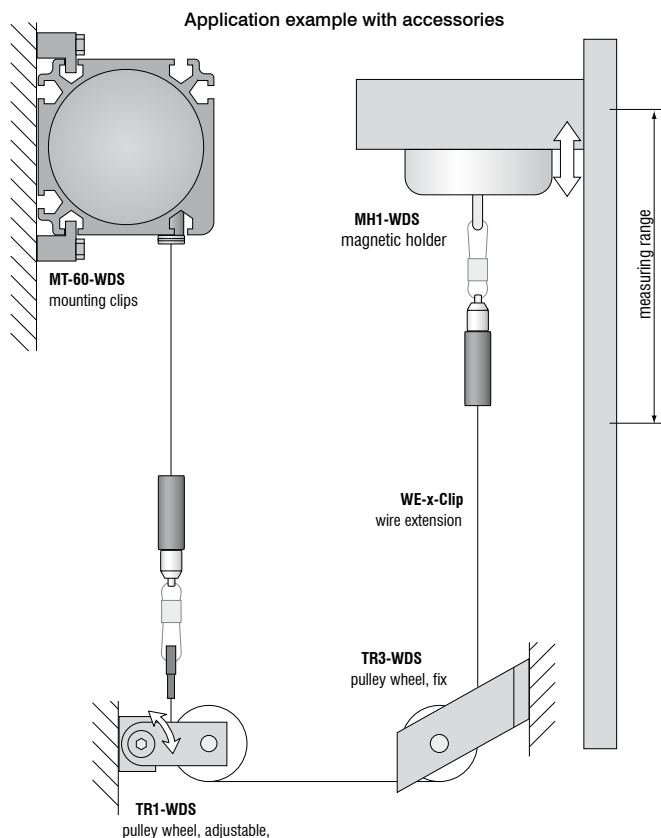


Mounting plate WDS-MP60



Installation information:


Wire attachment: The free return of the measurement wire is not permissible and it is essential that this is avoided during installation.


Wire exit angle:

When mounting a draw-wire displacement sensor, a straight wire exit ($\pm 3^\circ$ tolerance) must be taken into account. If this tolerance is exceeded, increased material wear on the wire and at the wire aperture must be expected.



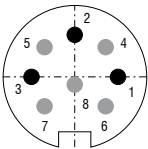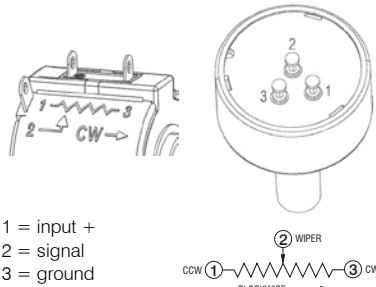Output		Plug M16 -SA / -SR	Integrated cable -CA / -CR	Open contacts
Potentiometric output (P)		 sensor side 1 = input + 2 = ground 3 = signal	white = input + brown = ground green = signal	 1 = input + 2 = signal 3 = ground
Supply voltage	max. 32VDC at 1kOhm / 1 Wmax			
Resistance	1kOhm ±10% (potentiometer)			
Temperature coefficient	±0.0025% FSO/°C			

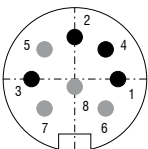Voltage output (U)		 sensor side 1 = supply 2 = ground 3 = signal 4 = ground	white = supply brown = ground green = signal yellow = ground	
Supply voltage	14 ... 27VDC (non stabilised)			
Current consumption	max. 30mA			
Output voltage	0 ... 10VDC Option 0 ... 5 / ±5V			
Load impedance	>5kOhm			
Signal noise	0.5mV _{eff}			
Temperature coefficient	±0.005% FSO/°C			
Electromagnetic compatibility (EMC)	EN 61000-6-4 EN 61000-6-2			
Adjustment ranges (if supported by the model)				
Zero	±20% FSO			
Sensitivity	±20%			

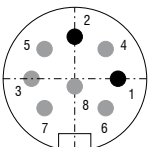Current Output (I)		 sensor side 1 = supply 2 = ground	white = supply brown = ground	
Supply voltage	14 ... 27VDC (non stabilised)			
Current consumption	max. 35mA			
Output current	4 ... 20mA			
Load	<600Ohm			
Signal noise	<1,6 μA _{eff}			
Temperature coefficient	±0.01% FSO/°C			
Electromagnetic compatibility (EMC)	EN 61000-6-4 EN 61000-6-2			
Adjustment range (if supported by the model)				
Zero	±18% FSO			
Sensitivity	±15%			

High performance sensors made by Micro-Epsilon



Sensors and systems for displacement and position



Sensors and measurement devices for non-contact temperature measurement




2D/3D profile sensors (laser scanner)



Optical micrometers, fibre optic sensors and fibre optics



Color recognition sensors, LED analyzers and color inline spectrometer

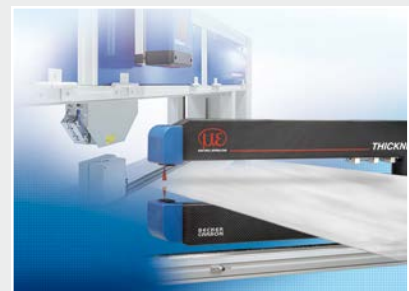

Measurement and inspection systems