


TRAINING AIDS

4210 Jean-Marchand St, Quebec City, PQ, Canada G2C 1Y6
Phone: 418-688-9067 / 800-567-0791 Fax: 418-834-3444
Email: info@consulab.com

EM-123-4 CIVIC (52746-1)

4-WHEEL HYDRAULIC BRAKE TRAINER NON-ABS 2007-2010 HONDA CIVIC

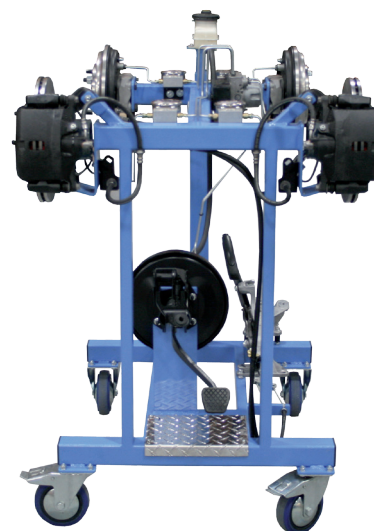

The EM-123-4 CIVIC 4-wheel hydraulic brake system trainer is used to demonstrate the functionality of a typical non-ABS braking system as it operates on a real vehicle. The trainer is built with OEM components and is based on the 2007-2010 Honda Civic platform. The trainer can be used in the classroom environment for demonstrations to students. The trainer provides a safe and effective method of demonstrating the principles of hydraulic braking systems used on today's vehicles.

EDUCATIONAL ADVANTAGES:

- Demonstrates full functionality of a 4-wheel hydraulic brake system
- Provides easy access to all brake components without the confinements of a vehicle
- Pressure gauges show actual braking pressure at each wheel circuit
- Trainer includes all OEM ABS components and hydraulic plumbing (non-functional) for student learning and awareness
- Many NATEF and Red Seal tasks can be accomplished using this trainer
- All brake system components are accessible for complete mechanical and hydraulic repair and service

4-WHEEL HYDRAULIC BRAKE TRAINER NON-ABS 2007-2010 HONDA CIVIC

APPLICATION:

- Non-ABS 2007-2010 Honda Civic

FEATURES:

- Real OEM automotive components with fully functional disc/drum hydraulic braking system including:
 - All OEM hydraulic components
 - OEM Brake pedal and parking brake pedal
 - OEM Power brake booster
 - OEM ABS components and hydraulic plumbing (non-functional)
 - OEM Parking brake components
- Hydraulic pressure gauges at each wheel (4)
- Fully functional parking brake system
- Fits through a standard 30" door opening
- Heavy duty metal stand with casters for easy transport (two fixed and two swivel w/locks)
- All routine brake service procedures can be performed on this trainer including:
 - Master cylinder service
 - Power brake booster service
 - Brake pad/shoe replacement
 - Disc/Drum service
 - Wheel bearing service
 - Caliper/Wheel cylinder service
 - Brake hose/line service
 - Parking brake service

TECHNICAL INFORMATION:

- Sturdy powder coated metal stand with two locking swivel and two fixed casters
- Dimensions: Height: 44" Width: 28" Depth: 42" (110 x 70 x 105 cm)
Height: 48" Width: 40" Depth: 48" (120 x 100 x 120 cm) (w/crate)
- Weight: 230 lb (104 kg) (product weight)
300 lb (136 kg) (shipping weight)