


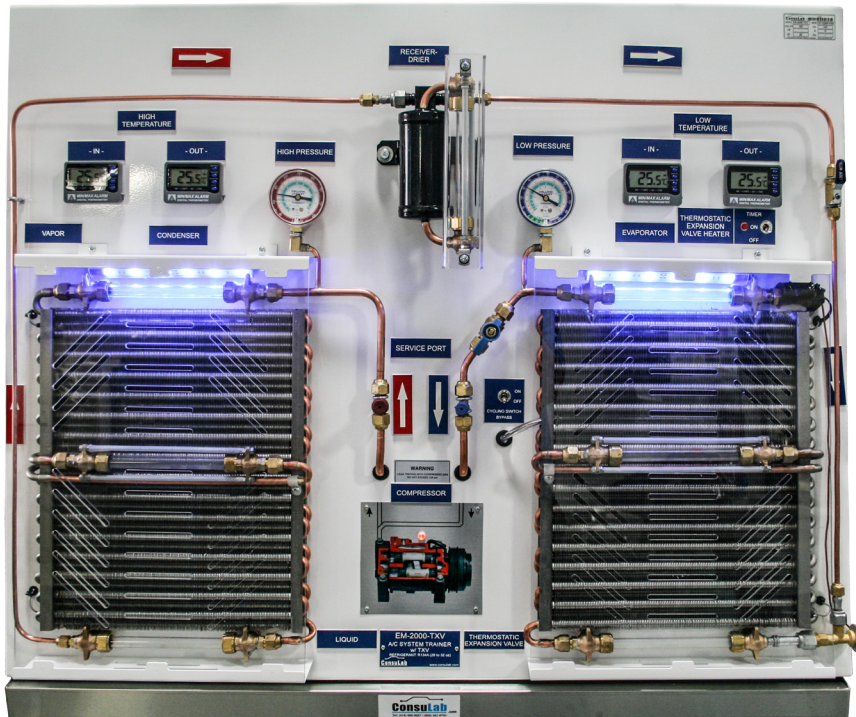

The Consulab EM-2000-TXV Air Conditioning trainer is a complete A/C system with unique features designed to enhance the instruction of air conditioning physics. The trainer uses the TXV (Thermal Expansion Valve) design of refrigerant flow control. The trainer uses common automotive components and can be used in both classroom and shop environments. The trainer utilizes a hermetically sealed and internally protected compressor. Operates on 120V 15A 60Hz circuit.

EDUCATIONAL ADVANTAGES:

- Clear sight glasses at the condenser and evaporator allow demonstration and observation of the refrigerant change of state, which reinforces vapor/liquid physics.
- Two rows of LED's that help in viewing refrigerant flow in condenser and evaporator which allow for clearer viewing of refrigerant flow.
- High and Low side pressure gauges and OEM R134a service ports provide real-world diagnostic opportunities. A/C recycling/recovery machines and manifold gauges can be installed on the trainer.
- Clear sight glass parallel with the receiver/drier to show refrigerant level.
- Digital thermometers located at the inlet and outlet of both evaporator and condenser allow students to observe complete A/C system operation. (Thermometers can be controlled [on/off] by instructors).
- In-line ball valves allow creation of system restrictions or blockages on high and low sides.
- Various A/C system symptoms can be created and demonstrated.
- TXV with adjustable built-in heater for system performance demonstration.
- Magnetic component identification labels and refrigerant flow direction arrows for student learning/testing objectives.

SPECIFICATIONS

FEATURES:

- OEM R134a service ports.
- High and Low side A/C pressure gauges.
- Adjustable temperature control switch for evaporator temperature levels.
- Digital thermometers (4) at inlet and outlet of evaporator and condenser.
- Two rows of LED's that help in viewing refrigerant flow in condenser and evaporator which allow for clearer viewing of refrigerant flow.
- Internally protected hermetically sealed A/C compressor.
- A/C compressor has manual starter with internal thermal protection.
- Cycling switch bypass toggle switch.
- High pressure (300psi) safety switch shuts off compressor.
- Adjustable 3-speed evaporator (1) and condenser (2) fans.
- Stainless steel condensate drip pan with drain.
- Power "ON" indicator light.
- Removable magnetic component name labels and refrigerant flow direction arrows.
- Operation and Student assignment manual included. Additional copies of the manual are available in PDF format for download at www.consulab.com at no charge after purchase.

TECHNICAL INFORMATION:

- Operates on a 120V 15A 60Hz circuit.
- Refrigerant: R134a (20 oz) (568 g)
- Refrigerant oil quantity: 1.5 oz
- Sturdy powder coated metal stand with two locking swivel and two fixed casters.
- Dimensions: Height: 42" Width: 42" Depth: 48" (105 x 105 x 120 cm).
- Weight: 250 lb (113.6 kg).