



ULTRA-FAST AND PRECISE PRESSURE TRANSMITTERS

BANDWIDTH 50 KHZ / RESISTANT UP TO 1000 °C / ACCURACY 0,1 %FS

SERIES M8COOL HB

The Series M8cool HB pressure transmitters, with their 0...50 kHz dynamic range and M8 pressure connection, are optimized both for dynamic (i.e. fast pressure pulsations at close proximity) as well as static pressure measurements. The sensor design enables excellent media compatibility and supports measurements at temperatures of up to 1000 °C with appropriate cooling.

Electronics

The circuitry for the Series M8cool HB was specifically developed to take advantage of the high dynamic range of the M5 sensor head. The signal path remains entirely analog, although it is readjusted in real time by means of a high-precision digital compensation circuit. This ensures the full dynamic range of the sensor and the accuracy of the measurement signal are maintained across the entire 0...50 kHz bandwidth. With a temperature range of -40 to +125 °C, the remote signal converter satisfies the exceptional demands associated with hostile environments; e.g., engine test benches. The sensor head alone, i.e., without the remote signal converter, is available for those applications better served by a sensor with 80 mV output (@ 1 mA supply). Included with this configuration is a calibration card providing the user with actual test data taken from the sensor during factory calibration (Series M8cool).

Sensor technology

The Series M8cool sensor incorporates a stable silicon sensor which is backside-soldered directly to a supporting element designed for excellent fluid dynamics. This construction eliminates the disadvantages of sealants, adhesives, separating membranes or capillary tubes in high temperature environments. The practically-flush connection to the measurement media is critical to the excellent dynamic range of 0...50 kHz. The micromechanical design delivers absolute measuring ranges of 3, 10 and 30 bar, overpressure protection of up to 5 times measuring range and effective isolation of mounting forces.

Performance characteristics

- Sensor head capable of exposure to 200 °C, with cooling up to 1000 °C
- The internal cooling channels act more efficiently than a conventional cooling adapter
- Broad compensated temperature range of -40...180 °C
- Excellent dynamic response, up to 50 kHz (pulsation measurements)
- Insensitive to shock and vibration
- Extremely compact design, pressure connection: M8 x 0,75 fine thread
- Teflon FEP cable with IP67 ferrule, suitable for use on test benches
- Pressure ranges of 3 bar, 10 bar and 30 bar (absolute)



Series M8cool HB



Sensor Head

ELECTRICAL CONNECTIONS

(shielded cables recommended)

Function	M12 A-coded	Binder 723
GND	1	1
+OUT	2	2
+Vcc	3	3
RS485A	4	4
RS485B	5	5
CASE	Thread	Thread

Maximum tightening torque 6 Nm





Specifications

Pressure Ranges, absolute				
PAA	0...3	0...10	0...30	bar
Overpressure / Burst pressure	15	50	90	bar

Intermediate ranges show the overpressure resistance for the next biggest range listed.

PAA: Absolute pressure. Zero at vacuum.

Accuracy ¹⁾	± 0,1 %FS
Total Error Band ²⁾	± 1,0 %FS @ -40...180 °C sensor temperature
Operating Temperature of Sensor Head	-50...+180 °C without cooling -50...+1000 °C with water (100 ml/min) or air cooling
Operating Temperature of Electronics	-40...+125 °C
Temp. Coefficients for Amplifier Electronics	± 0,01 %/K max.

Please refer to the installation instruction «Installing and cooling the M8cool».


¹⁾ Linearity (best straight line), hysteresis and repeatability
²⁾ Accuracy and temperature error

Type	3-wire with RS485
Signal Output	0...10 V
Excitation	13...32 VDC
Load Resistance	> 5 kΩ
Limiting Frequency (-3 dB)	50 kHz min.
Power Consumption (off-load)	15 mA max.
Electrical Connections	M12 plug (5-pin), Binder 723 (5-pin)
Pressure Connection	Metric fine thread: M8 x 0,75 male
Cable (between sensor and electronics)	1,5 m FEP cable with Ø 2,9 mm shield
Insulation	> 10 MΩ @ 300 VDC
Materials in Contact with Media	Stainless steel AISI 316L (DIN 1.4404 / 1.4435), silicon, gold, external copper seal
Media Compatibility	Exhaust gases, oil, fuels (diesel, petrol, etc.), coolants, etc.
Protection	IP67 (with a suitable mating plug)
EMC	EN 61000-6-2 / EN 61000-6-3 / EN 61326-2-3
Options	<ul style="list-style-type: none"> • Other pressure connections via thread adapter • Other compensated pressure and temperature ranges • Without compensation electronics as Series M8cool • With X-line electronics (more precise, fg = 1,3 kHz) instead of HB electronics

The temperature of the sensor head can be read-out and the cooling during use monitored by the RS485 USB interface converter K-114 and the royalty-free Software CCS30. Moreover, the zero point can be readjusted over the digital interface.

*Identification:
Class.Group: 5.40*

Frequency response for the amplifier electronics of the Series M8cool HB

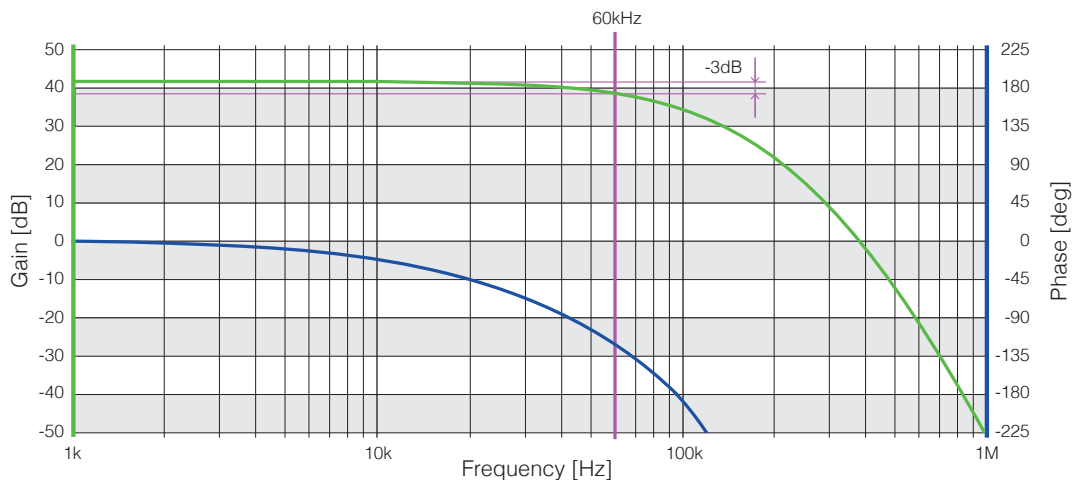

The 'HB' electronics designation stands for high bandwidth and is associated with the project name HummingBird.