KELLER

SERIES 4 LC...9 LC

PIEZORESISTIVE OEM PRESSURE TRANSMITTERS

-40...150 °C, WITH EMBEDDED SIGNAL CONDITIONING

The Series 4 LC...9 LC family of miniature OEM pressure transmitters combines a piezoresistive pressure sensor with -40...150 $^{\circ}$ C-capable signal conditioning in one compact, easy-to-integrate package.

Technology

The "LC" line of miniature pressure transmitters leverages Keller's extensive background in high-stability piezoresistive pressure sensors and innovative digital signal processing. Now, both pressure sensor and signal processor are integrated into a miniature, hermetically-sealed housing no larger than was once required for the sensor only!

The name given to this new technology is Chip-In-Oil (CIO). CIO means not only that the entire pressure transmitter is embedded within a hermetically-sealed, oil-filled housing, but that this transmitter can then be seamlessly integrated into the OEM product, achieving cost savings and system performance not possible with other, conventional technologies.


Interfaces

The ratiometric analog output simplifies the integrators task by providing a signal output wherein the output is ratiometric to the supply, thereby eliminating the need to incorporate an expensive, absolute reference. Providing an 0,5...4,5 VDC output from a 5 VDC supply, the LC-transmitter is inherently protected against overvoltage and reverse polarity up to \pm 33 VDC and provides noise immunity by a factor of 10X relative to the latest standards regarding emitted and conducted EMI.

Performance features

- · Hermetically protected sensor electronics extremely resistant to environmental influences
- Operating temperature up to 150 °C
- Ultra-compact, robust housing made from stainless steel (optionally Hastelloy C-276)
- No external electronics for compensation or signal processing
- Extremely accurate, outstanding long-term stability, no hysteresis
- Pressure ranges of 1 bar to 1000 bar
- Extremely easy to integrate in overall systems
- Two-chip solution with pressure sensor and signal processing separation provides a high degree of flexibility.



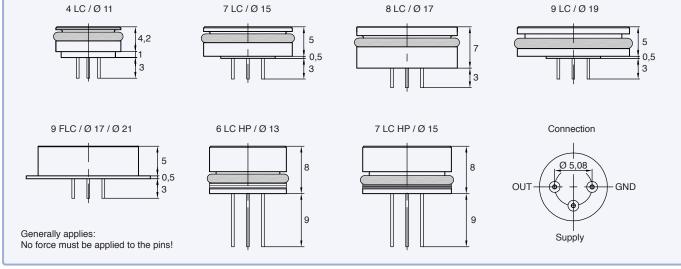

KELLER AG für Druckmesstechnik CH-8404 Winterthur +41 52 235 25 25 info@keller-druck.com Edition 11/2015 Subject to alterations Companies approved to ISO 9001 www.keller-druck.com



KELLER

Specifications

Accuracy* max. +/- 0.25 %FS * Linearity best straight line @ RT, hysteresis, repeatability Overpressure 2,5 x pressure range, max. 300 bar resp. 1200 bar (6 LC HP, 7 LC HP) max. +/- 0,3 %FS

Long Term Stability

Type/	Dimensions	Pressure	Operating	Comp. Temp.	TEB (1)
Version	[mm]	Range	Temperature	Range	[%FS]
4 LC	ø 11 x 4,2	3200 bar abs.(2)	-10+80 °C	050 °C	± 1,0 %FS
7 LC	ø 15 x 5	2200 bar abs.	-40+125 °C	-1080 °C	± 1,0 %FS
		230 bar rel. $^{\scriptscriptstyle (3)}$		-40+125 °C	± 2,0 %FS
8 LC	ø 17 x 7	1200 bar abs.	-40+150 °C	-1080 °C	± 0,8 %FS
9 LC	ø 19 x 5	130 bar rel.		-40+125 °C	± 1,5 %FS
9 FLC	ø 17 x 5,5	150 bar abs.		-40+150 °C	± 2.5 %FS
	Flange ø 21	130 bar rel.		(only > 3 bar)	_ <u>_</u> ,o ,o: o
	10.0			(0.00.00	0.04/50
6 LC HP	ø 13 x 8	2001000 bar	-40+150 °C	-1080 °C	± 0,8 %FS
7 LC HP	ø 15 x 8			-40+150 °C	± 2,0 %FS

(1)TEB (Total Error Band): Maximum deviation within specified pressure and compensated temperature range

3-wire

5,0 VDC ± 0,5 V

0,1...0,9 V/V (0,5...4,5 V ratiometric)

± 33 VDC (permanently on all leads)

abs: Absolute Pressure Measurement (PAA: Absolute. Zero at vacuum PA: Sealed Gauge. Zero at 1,0 bar abs.) rel: Referential version (PR: Vented Gauge. Zero at atmospheric pressure) (3)

Type Signal Output Supply Reverse Polarity and Overvoltage Protection Power Consumption Load Resistance Sampling Rate / Bandwidth Rise Time T₉₉ Response Time (Supply ON) Isolation EMC-Industry DO-160F RF Susceptibility (radiated) DO-160F RF Susceptibility (conducted)

Material in Contact with Media

Pressure Endurance Vibration Endurance Shock **Oil Filling**

Electrical Connection





KELLER AG für Druckmesstechnik CH-8404 Winterthur +41 52 235 25 25 M info@keller-druck.com

max. 8 mA >5 kΩ O-Ring Housing Glass Feed Diaphragm 2 kHz / 800 Hz Throuah 1 ms < 5 ms (0...99%) > 100 MΩ @ 500 VDC EN 61000-6-2 / EN 61000-6-3 / EN 61326-2-3 / BCI 200mA @ 1...250MHz Cat. R: 150 V/m @ 400 MHz...8 GHz PM / 30 V/m @ 100 MHz...400 MHz CW & SW, Cat.R: 30 mA @ 10 kHz...40 MHz / 3 mA @ 40 MHz...400 MHz Stainless Steel AISI 316L (DIN 1.4404 / 1.4435) / optionally Hastelloy C-276 6 LC HP: Steel, 7 LC HP: Steel or optionally and @ > 600 bar and > 100 °C Inconel 718 O-Rings: Viton® 70 Shore A (-20...200 °C, exchangeable), @ 6 LC HP / 7 LC HP: Viton® 90 Shore A Support Ring @ 6 LC HP / 7 LC HP: PTFE 0...100% FS @ 25°C: > 10 mio. pressure cycles with appropriate installation (see install. requirements) 20 g, 5....2000 Hz, X/Y/Z-axis 75 g sine 11 ms Silicone oil, others on request

- Glass feed through pins D = 0,45 mm, L = 2,5...4 mm, Positioning: See scale drawing.
- Attention: It's important not to load forces to the pins!
- Silicone wires 0,09 mm² @ the glass feed through pin - Plug JST 1,5 mm, 3-pole. Type: B3B-ZR-SM4-TF. Only for -20...85 °C and not for 4 LC & 6 LC As counterpart: IDC-socket with 1,27 mm flat band. Type: 03ZR-8M-P

As counterpart: Crimp-socket with wires AWG 28. Type: ZHR-3, Crimp-contact: SZH-003-P0.5

Other pressure and temperature ranges, other accuracies.

Applications requiring a mechanical package with certain pressure and electrical connections can be accommodated. Almost any combination of connections is possible with our Series 21C product line. CIO is optionally available with the 2-wire I2C digital interface, enabling bus-capability in the system design.

KELLER Ges. für Druckmesstechnik mbH DE-79798 Jestetten R +49774592140r eurocenter@keller-druck.com

Edition 11/2015 Subject to alterations Companies approved to ISO 9001 命 www.keller-druck.com



The integration of the transmitter electronics means that even extremely small designs can be properly supported, and there is a considerable amount of freedom for connection variants. Furthermore, there is no need to protect the nonexistent downstream electronics against moisture and condensation.

