

# More Precision

optoNCDT 1900 // Laser displacement sensor for advanced automation



### Laser displacement sensor for advanced automation






- Unique combination of size, speed and accuracy
- Ideal for dynamic and high resolution measurements
- Highest ambient light resistance in its class
- Advanced Surface Compensation for high speed measurements on changing surfaces
- Stable aluminum die-cast housing
- New installation system enables repeatable sensor alignment in ideal measuring position

#### Next-generation laser sensors

The optoNCDT 1900 is the latest model of Micro-Epsilon laser sensors. This innovative sensor is used for dynamic displacement, distance and position measurements offering a unique combination of high speed, compact design and accuracy. The integrated high-performance controller enables fast and highly precise processing and output of measurement values. The innovative optoNCDT 1900 laser triangulation sensor is used whenever maximum precision is required with the latest technology. It solves measurement tasks in the fields of automation, car manufacturing, 3D printing and in coordinate measuring machines.

#### Highest stability based on intelligent signal optimization

For the first time, a two-step measurement value averaging feature is available to optimize the signal. This enables a smooth signal at edges and steps. Especially for high speed measurements of moving parts, measurement averaging enables a precise signal course.

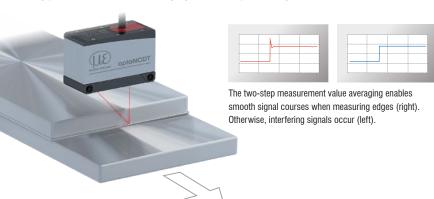

## Simple installation and initial operation

Mounting the sensor using fitting sleeves automatically aligns the sensor in the correct position. This enables both easy sensor replacement and even higher precision in solving measurement tasks. Thanks to its small dimensions, the laser sensor can also be integrated in confined spaces.




### Patented installation

Easy mounting and high repeatability with the sensor replacement

# Advanced Surface Compensation The intelligent exposure control for demanding surfaces

The optoNCDT 1900 is equipped with an intelligent surface control feature. New algorithms generate stable measurement results even on demanding surfaces where changing reflections occur. Furthermore, these new algorithms compensate for ambient light up to 50,000 lux. Therefore, this is the sensor with the highest resistance to ambient light in its class which can even be used in strongly illuminated environments.





Model		ILD1900-10	ILD1900-25	ILD1900-50	
Measuring range		10 mm	25 mm	50 mm	
Start of measuring range		20 mm	25 mm	40 mm	
Mid of measuring range		25 mm	37.5 mm	65 mm	
End of measuring range		30 mm	50 mm	90 mm	
Measuring rate <sup>1)</sup>		continuously adjustable between 0.25 10 kHz			
		7 adjustable stages: 10 kHz / 8 kHz / 4 kHz / 2 kHz / 1.0 kHz / 500 Hz / 250 Hz			
Lincarity 2		$<\pm2\mu\mathrm{m}$	$<\pm5\mu\mathrm{m}$	$<\pm10\mu\mathrm{m}$	
Linearity 2)			< ±0.02 % FSO		
Repeatability 3)		$<$ 0.4 $\mu m$	< 0.8 $\mu$ m	< 1.6 μm	
Temperature stability 4)		±0.005 % FSO / K			
	SMR	115 x 150 μm	200 x 265 μm	220 x 300 μm	
Light spot diameter	MMR	60 x 65 μm	70 x 75 μm	95 x 110 μm	
(±10 %) <sup>5)</sup>	EMR	120 x 140 μm	220 x 260 μm	260 x 300 μm	
	smallest diameter	60 x 65 $\mu$ m with 25 mm	65 x 70 $\mu$ m with 35 mm	85 x 90 $\mu$ m with 55 mm	
ight source		Semiconductor laser < 1 mW, 670 nm (red)			
aser safety class		Class 2 in accordance with DIN EN 60825-1: 2015-07			
Permissible ambient light		50,000 lx			
Supply voltage		11 30 VDC			
Power consumption		< 3 W (24 V)			
Signal input		1 x HTL/TTL laser on/off; 1 x HTL/TTL multi-function input: trigger in, slave in, zero setting, mastering, teach-in; 1 x RS422 synchronization input: trigger in, sync in, master/slave, master/slave alternating			
Digital interface		RS422 (18 bit) / PROFINET <sup>6</sup> / EtherNet/IP <sup>6</sup>			
Analog output		4 20 mA / 0 5 V / 0 10 V (16 bit, freely scalable within the measuring range)			
Switching output		2 x switchir	ng output (error & limit value): npn, pnp	o, push pull	
Synchronization		possible for simultaneous or alternating measurements			
Connection		integrated cable 3 m, open ends, min. bending radius 30 mm (fixed installation); or integrated pigtail 0.3 m with 17-pin M12 plug; optional extension to 3 m / 6 m / 9 m / 15 m possible			
-	Storage	-20 +70 °C (non-condensing)			
Temperature range	Operation	0 +50 °C (non-condensing)			
Shock (DIN-EN 60068-2-27)	)	15 g / 6 ms in 3 axes			
Vibration (DIN EN 60068-2-6)		20 g / 20 500 Hz			
Protection class (DIN-EN 60	0529)	IP67			
Material		Aluminum housing			
Weight		approx. 185 g (incl. pigtail), approx. 300 g (incl. cable)			
Control and display elements		Select & function keys: interface selections, mastering (zero), teach, presets, quality slider, frequency selection, factory settings; web interface for setup <sup>7)</sup> : application-specific presets, peak selection, video signal, freely selectable averaging possibilities, data reduction, setup management; 2 x color LEDs for power / status			

FSO = Full Scale Output


SMR = Start of measuring rang, MMR = Mid of measuring range, EMR = End of measuring range
The specified data apply to a white, diffuse reflecting surface (Micro-Epsilon reference ceramic for ILD sensors)

<sup>1)</sup> Factory setting: measuring rate 4 kHz, median 9; modifying the factory setting requires the IF2001/USB converter (see accessories)

<sup>2)</sup> Relates to digital output

 <sup>4</sup> Helates to digital output
 5 Typical value with measurements at 4 kHz and median 9
 4 Relates to digital output in mid of measuring range
 9 Light spot diameter determined using a point-shaped laser with Gaussian fit (full 1/e² width)
 6 Connection via interface module (see accessories)
 7 Connection to PC via IF2001/USB (see accessories)

### optoNCDT 1900 (10/25/50 mm)

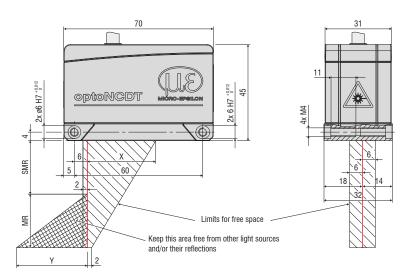

Connect	tor (sensor side)	
41 M12		
	47.5	

MR	SMR	Х	Υ
10	20	33	14
25	25	33	33
50	40	36	45

Modifications reserved / Y9761713-A012070GKE